

Please follow below steps to copy files: batch\_inf.py, esc2Kernel.py, Esc2\_python.py, serial\_esc2.py to Directory: home/pi/esc2 in raspberry pi


1. Require a Wireless keyboard and mouse combo. Require a USB memory stick
2. Copy Esc2\_python.py to your USB memory stick
3. Insert wireless USB stick to Seed counter as show below:



- 4.
5. Turn on Esc2 counter
6. Waiting for 1 minute and Press Esc key on the keyboard. Touch screen will become to desktop mode:




7. Insert USB memory stick, a popup window will appear
8. Click Ok. Then go to the folder included files. Click Edit in top left menu → Select All in your folder of USB stick. Right click the button on the mouse to select Copy

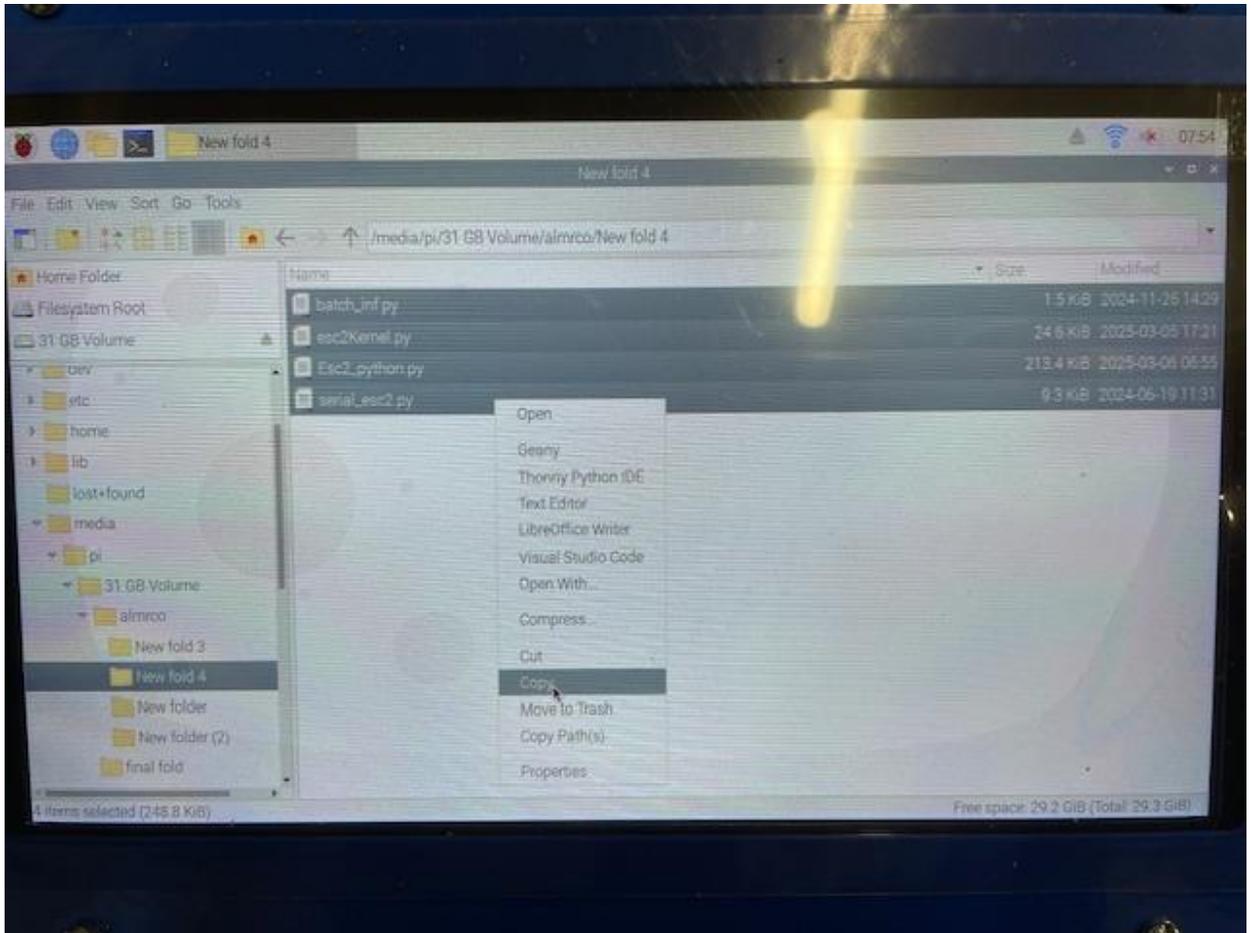

- 9.
10. On most left menu, Select Home → then expand, → pi, expand → select esc2, Right click the button on the mouse to select paste, → select overwrite
11. After that, close this popup window, then click icon of reject USB memory stick on the most right top corn, unplug USB stick

12. Quick double click icon Esc2\_pyton on the desktop screen, Seed counter enter normal state.

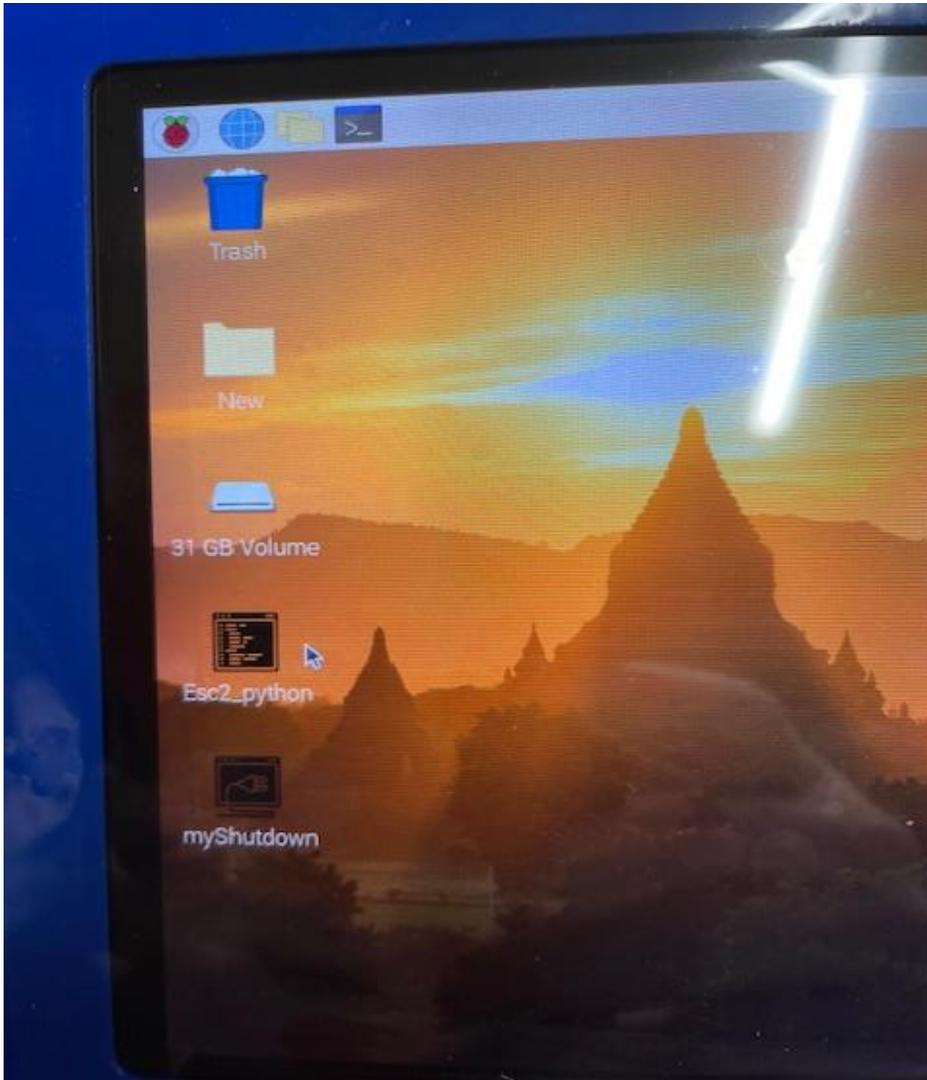

13.

14. Waiting for 1 minute, Turn off power.

15. Waiting for 1 minute, turn on seed counter for work.